

5-in-1 Rotary Cheese Grater

Quick start — setup, blades, cleaning. Keep this in the drawer.

ORODEMARK

WHAT'S IN THE BOX

Grater body + suction base	5 stainless steel blades
Clear barrel & hopper	Blade storage box
Food pusher	Cleaning brush
Crank handle	Non-slip peeler

READY TO GRATE IN UNDER A MINUTE

Quick & Easy Installation

1 Press lever down to secure base with firm suction on tabletop.

2 Press button and slide barrel into base slot until it clicks into position

3 Insert food pusher into hopper

4 Depress blade cassette to install or remove blade

5 Slide rotary drum into barrel

6 Secure drum by screwing handle on & You're Ready to Grate!

CHANGING A BLADE

1. Unscrew the handle, slide the **rotary drum** out of the barrel.
2. **Depress the blade cassette** — the flap on its side — to open it. This is step 4 on the panel opposite, and it is the part people miss.
3. **Slide the blade in until fully seated.** Short of that and it drops out the first time you turn the handle.
4. **Close and press until it clicks locked.**
5. Slide the drum back into the barrel, screw the handle on.

Listen for the click. No click means the blade is not locked in. This is the single most common question we get.

CLEANING

1. Handle off, drum out, press the base button to free the barrel.
2. Open the cassette and **take the blade out before washing.**
3. Use the **cleaning brush** on the blade — it clears the holes from behind, which a sponge cannot, and keeps fingers off the edges.
4. **Dry everything fully,** especially the blade, before reassembling.

Blades fell out after washing? That is why. Washing lifts the blade out of its seat — take it out first, dry it, re-seat until it clicks.

MORE THAN CHEESE

Nuts	Almonds, walnuts — baking and salads
Chocolate	Desserts, hot drinks, toppings
Vegetables	Carrots, cucumber, courgette — sliced or julienned
Hard fruit	Apples, for baking or garnishing

IF SOMETHING ISN'T RIGHT

Blade comes loose	Not fully seated — re-seat until it clicks
Drum won't go in	Cassette isn't fully closed. Close it first
Handle won't turn	Packed too tight — lift the pusher, loosen the load
Base slides	Wipe the counter dry, press the lever down firmly
Cheese mashes	Too soft or warm — chill it 15 minutes



Watch it being set up

Scan for the 2-minute video, or search **@orodemark** on TikTok. Still stuck? Email us — we reply to every message, and we would rather fix it than have you guess.

<https://www.orodemark.com/how-to-use/rotary-cheese-grater>